

## SIDEKICK SOFT WATER INJECTOR FEED KIT


### 20015X102

- 1) Shut off main water supply and relieve system line pressure.
- 2) Remove outlet elbow from bypass of existing softener and main water line.
- 3) Apply Teflon tape to 3/8 stem threads and screw into drilled & tapped elbow.
- 4) Push 3/8 x 3/8 elbow onto stem & insert 3/8 tubing to the other end.
- 5) Reattach elbow to bypass and main water line (shown below).



3/8 check valve

- 6) Remove existing tubing and black coupling from air intake. Push white 3/8 check valve (red end) onto the air intake. Arrow indicator on the check will be pointing down; then insert soft water tubing.

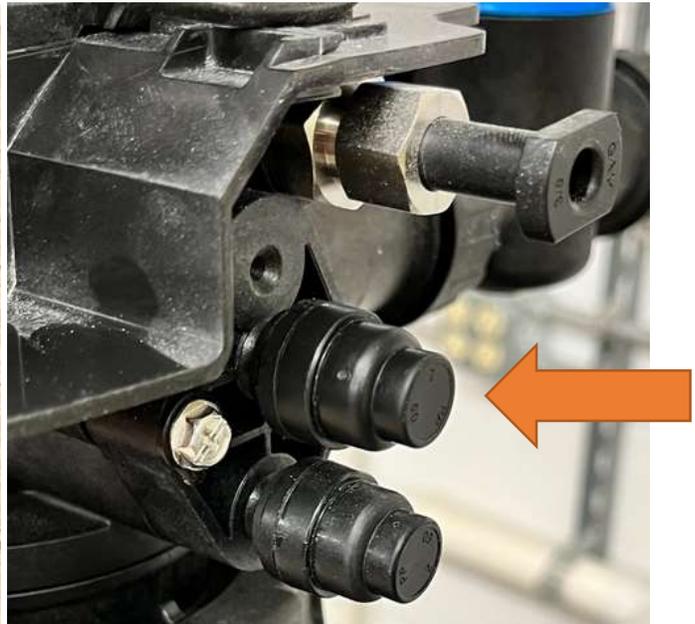

- 7) On the SideKick valve, remove existing air intake tubing & elbow then push on 3/8 plug in its place.
- 8) Turn main water supply back on and check for leaks. Run service water to evacuate excess air.